


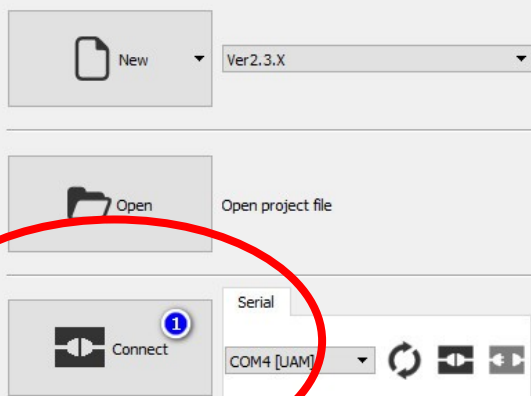

1



Quit

Product name: --, Firmware version: --, Serial number: --

2

Sensing

Min detection width 70 [mm]
Active areas 1
Area input delay 30 [ms]
Laser off mode Disabled

Operation mode

Protection1 + Warning1, 2 Enabled
Protection1, 2 Disabled

7 segment display

Upside down configuration Disabled

Function

EDM Disabled
Interlock Disabled
Reference monitor Disabled
Muting Disabled
Area sequence Disabled
Master slave Disabled
Encoder input Disabled

Response time**Protection1**

On: 270 ms
Off: 270 ms

Recorder


Please specify a file!

Scan limit:



0

Event Recorder**Player**Co²uration Monitor Report

WARN 2 WARN 1 USED 1/2
Area number 1

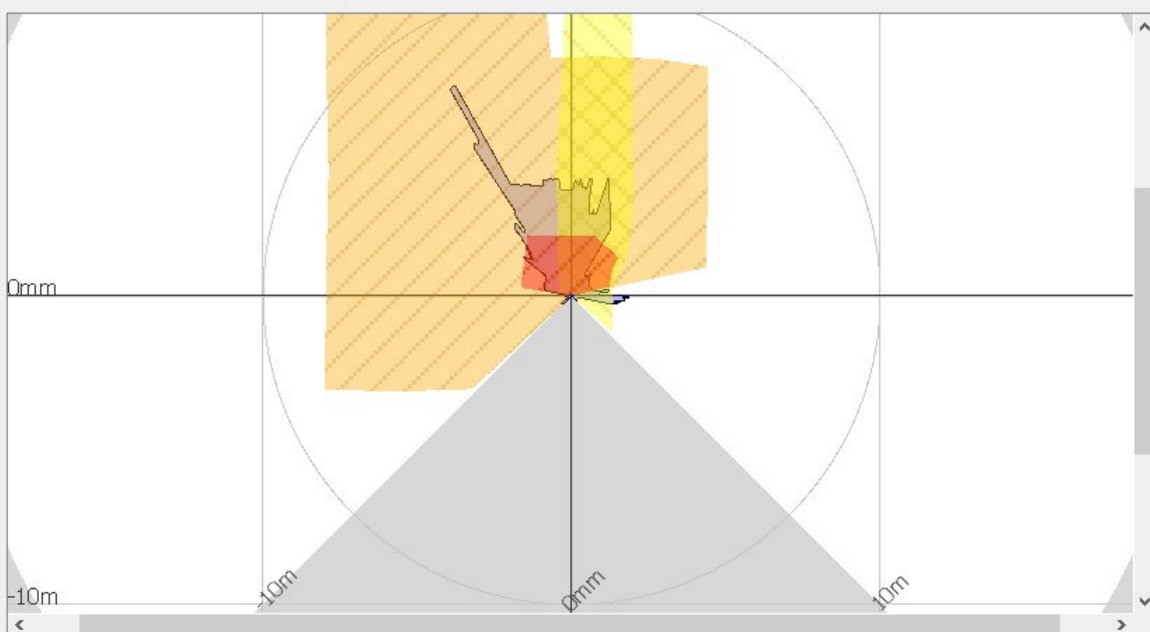**Mouse position**

X : -8091[mm] Y : 8591[mm]
Radius : 11801[mm] Angle : 133.25[deg]
Step : 714

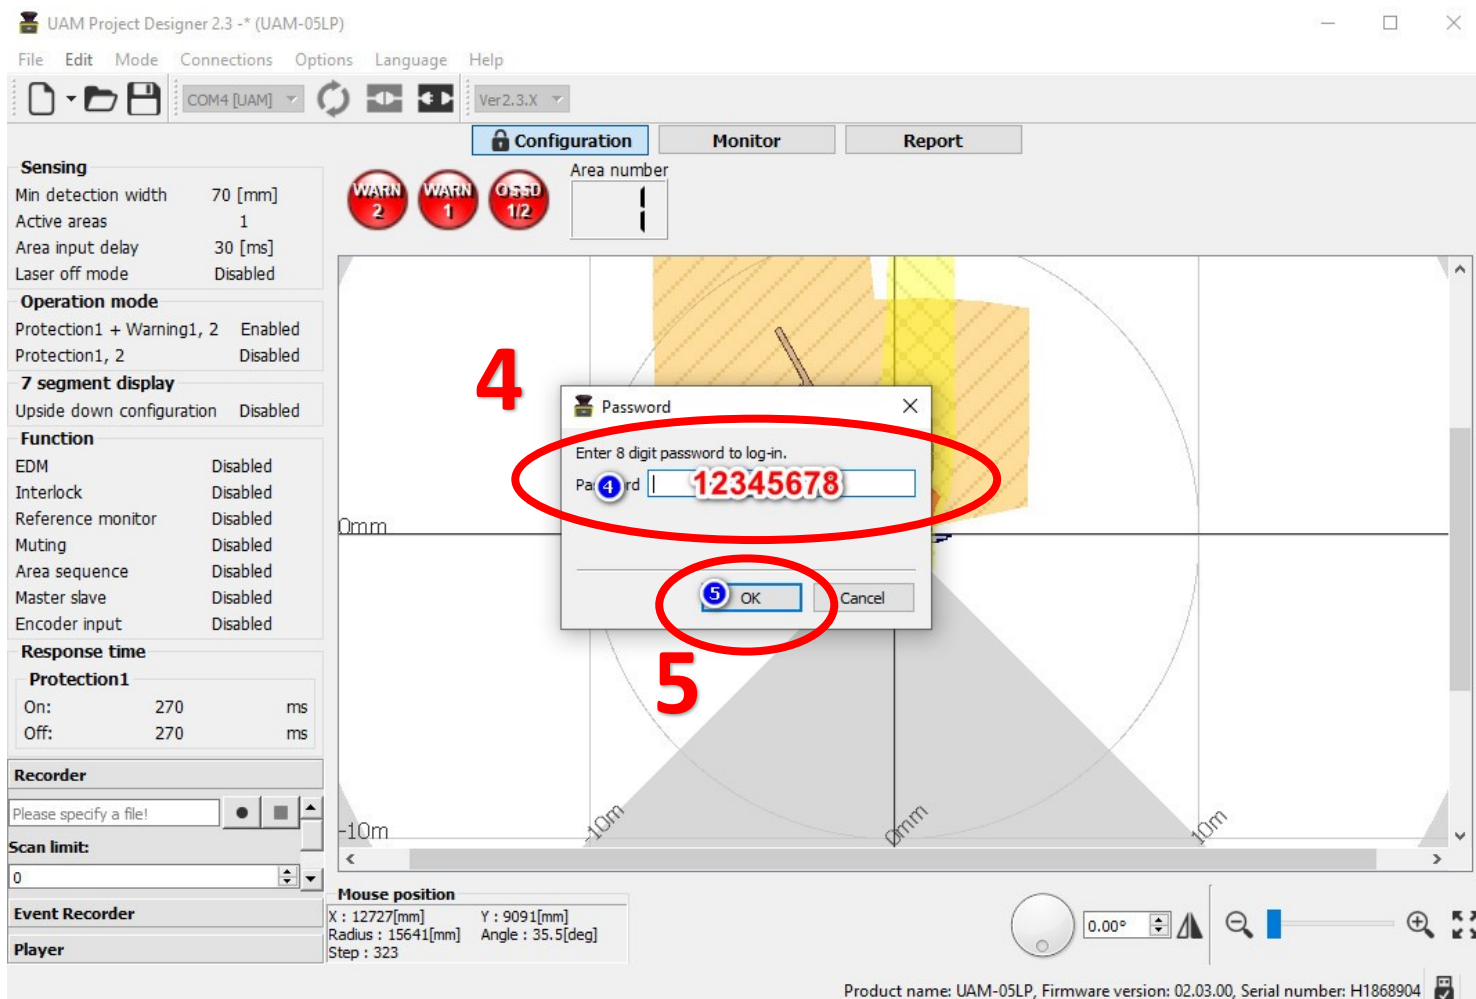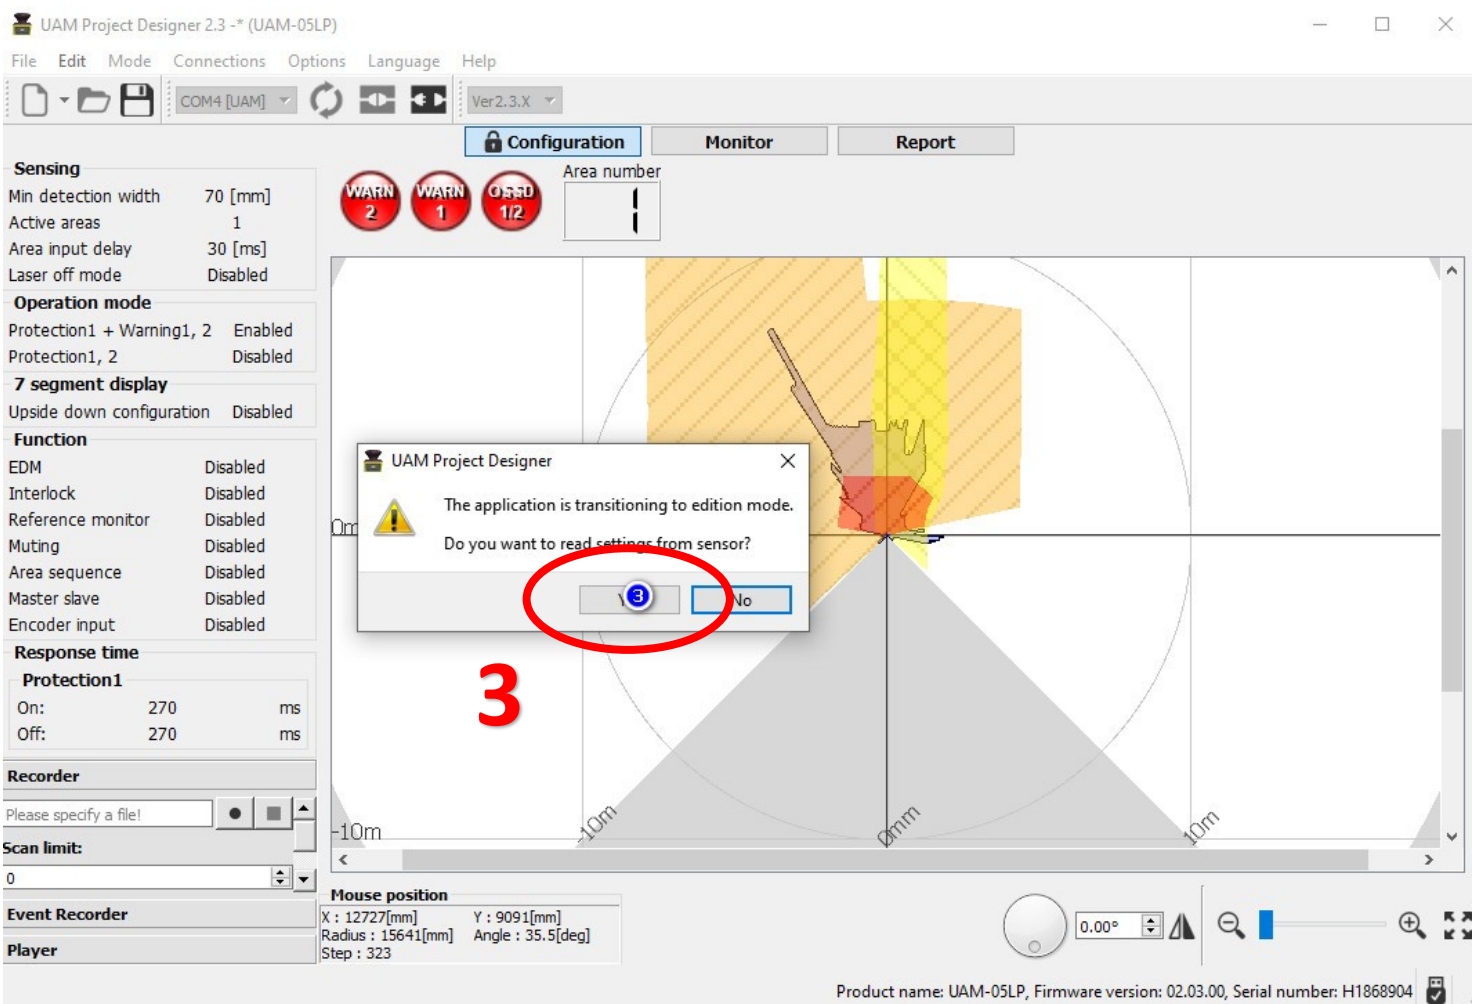



COM4 [UAM]



6

7

Configuration

Monitor

Report

Read from sensor

General

Function

Area

Confirm

Transmit to sensor

Product information

Product identity MCCORMICKASSET4615NH1868930

Size limit : 64 characters

User name KEITH

Size limit : 50 characters

Date

2019/09/04

Ethernet information

IP address 192.168.0.10

Subnet mask 255.255.255.0

Default gateway 192.168.0.1

Product name: UAM-05LP, Firmware version: 02.03.00, Serial number: H1868904

COM4 [UAM]

Ver 2.3.X

Configuration

Monitor

Report

Read from sensor

General

Function

Area

Confirm

Transmit to sensor

Area

Controls

Area comment:

Scan skip count: 0 (0 - 3)

Warning1

Coordinates

Teaching

Pt X [mm] Y [mm]

1 4367 928

2 4411 4449

3 4421 7431

4 2795 7680

5 885 7771

6 -674 7710

7 -999 10873

8 -7929 11015

9 -7952 7223

10 -7880 4015

11 -7945 1472

12 -8001 -3031

13 -5649 -3099

14 -3236 -3017

+ 0 0

Controls XY Controls Polar

Warning2

Protection

Warning1

Warning2

Protection

Warning1

Warning2

Protection

Warning1

Warning2

Protection

Warning1

Warning2

Protection

Warning 1 area

Warning 2 area

Warning 1 area

Warning 2 area

Warning 1 area

Warning 2 area

Warning 1 area

Warning 2 area

Warning 1 area

Warning 2 area

Warning 1 area

Warning 2 area

Warning 1 area

Warning 2 area

Warning 1 area

Warning 2 area

Warning 1 area

Warning 2 area

Warning 1 area

Warning 2 area

Warning 1 area

Warning 2 area

Warning 1 area

Warning 2 area

Warning 1 area

Warning 2 area

Warning 1 area

Warning 2 area

Warning 1 area

Warning 2 area

Warning 1 area

Warning 2 area

Warning 1 area

Warning 2 area

Warning 1 area

Warning 2 area

Warning 1 area

Warning 2 area

Make sure the Warning 1 and 2 are within the blue areas.

Mouse position

X : 4625[mm]

Y : 11427[mm]

Radius : 12728[mm]

Angle : 68[deg]

Step : 452

Product name: UAM-05LP, Firmware version: 02.03.00, Serial number: H1868904

